


PROBLEM	CAUSE	SOLUTION
By pressing the button (45) “  ” the display does not turn on.	<p>Low battery.</p> <p>Main fuse blown.</p> <p>The battery’s plug is still located in the charger’s outlet.</p>	<p>Check that the battery is charged.</p> <p>Replace the main 5A or 80A fuse.</p> <p>Place the plug correctly.</p>
The brush does not rotate.	<p>Function card damaged.</p> <p>Display card damaged.</p> <p>The touch sensor on the handle is defective.</p> <p>Brush motor damaged.</p> <p>Brush button not pressed.</p>	<p>Replace.</p> <p>Replace.</p> <p>Replace.</p> <p>Replace.</p> <p>Press the relative button.</p>
Aspirator does not work.	<p>Function card damaged.</p> <p>Display card damaged.</p> <p>Intake motor damaged.</p> <p>Aspirator button not pressed.</p> <p>Recovery tank full.</p>	<p>Replace.</p> <p>Replace.</p> <p>Replace.</p> <p>Press the button.</p> <p>Empty, wash and clean the tank and the probes.</p>
The machine does not dry well, leaving traces of water on the floor.	<p>Aspirator off.</p> <p>Aspiration tube blocked.</p> <p>Dirty wiper.</p> <p>Recovery tank full.</p> <p>Dirty water filter clogged.</p> <p>Squeegee rubber blades worn.</p>	<p>Start up the aspirator.</p> <p>Check and if necessary clean the aspiration tube that connects the squeegee to the recovery tank.</p> <p>Clean the wiper.</p> <p>Empty the recovery tank.</p> <p>Clean the filter.</p> <p>Replace or turn over the squeegee rubber blades.</p>

PROBLEM	CAUSE	SOLUTION
No water comes out.	Tank empty. Solenoid valve enabling switch not pressed. Tap turned off. Filter blocked. Solenoid valve does not work.	Fill the tank. Press the switch. Open the tap Clean the filter. Call the technical support service.
Insufficient floor cleaning.	Unsuitable brushes or detergent. Brush worn.	Use brushes or detergents which are suitable for the type of floor or dirt to be cleaned. Replace the brush.
The brush does not rotate. Aspirator does not work. No water comes out.	Defective sensor.	Replace.