

PROBLEM	CAUSE	SOLUTION
If the levers on the handle bar are pressed, the machine does not start.	Low battery (battery version only).	Check that the battery is charged.
	Plug disconnected (charger version only).	Connect the plug.
The brush does not rotate.	Levers on the handle bar not pressed.	Press the levers.
	Brush rotation enabling button not pressed.	Press the button.
	Brush motor damaged.	Replace the engine.
Aspirator does not work.	Vacuum cleaner turned off.	Start the vacuum cleaner by pressing the corresponding button.
	Intake motor damaged.	Replace the turbine.
The machine does not dry well, leaving traces of water on the floor.	Aspirator off.	Start the vacuum cleaner by pressing the corresponding button.
	Obstructed vacuum tubes.	Check and if necessary clean the vacuum tubes that connect the wipers to the recovery tank.
	Dirty wiper rubber blades.	Clean the rubber blades of the wiper.
	Squeegee rubber blades worn.	Replace or turn over the squeegee rubber blades.
The machine turns off.	Low battery.	Charge battery.
	Recovery tank full.	Empty the tank.
No water comes out.	Tank empty.	Fill the tank.
	Filter blocked.	Clean the filter.
	Pump not functioning.	Call the technical support service.
Insufficient floor cleaning.	Inadequate brush or detergent.	Use brush or detergents adequate to the type of floor or dirt to be cleaned.
	Brush worn.	Replace the brush.