

<i>Inconvenience</i>	<i>Cause</i>	<i>Solution</i>
<i>The vacuum doesn't start</i>	Lack of power	Check the presence of voltage in the power socket. Check the plug and the power cord integrity. Rearm the magneto-thermal switch
	Magneto-thermal switch triggered	
<i>Dusts leakage</i>	Suction hose / exhaustis punctured	Replace the hose
	Filter not suitable for the type of suction	Assemble the filter suitable for the type of material to vacuum
<i>The vacuum doesn't vacuum as it should</i>	Hose punctured or clogged	Check the hose conditions and replace it if necessary.
	The container is full	Empty the container
	The filter is clogged	Clean the filter or replace it if necessary
	The gaskets are worn down	Check the gaskets and replace them if necessary
	Air loss	Check for possible air losses from the closing hooks, from the tightening screws, from the container and from the filter chamber
<i>Motors are excessively noisy</i>	<i>Contact Ghibli&Wirbel technical assistance</i>	