

| PROBLEM | CAUSE | SOLUTION |
|-----------------------------------|-------------------------------|---|
| The vacuum cleaner does not work. | Switch not pressed. | Press the switch. |
| | Plug not inserted. | Insert the plug into the socket. |
| | No current. | Check the power line. |
| Suction is not satisfactory. | Paper bag full. | Replace the dust bag. |
| | Filter elements clogged. | Clean the filter elements. |
| | Accessories or tubes clogged. | Check and clean the flexible hose and the suction nozzle. |