TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
The suction motor does not start and does not work. (For Class M and H versions) The filter "and suction" "LEDs are off.	Plug not inserted.	Insert the plug into the electrical socket.
	No current.	Check the power supply line.
	Suction motor overheated.	Check that the motor is working correctly.
	Suction motor damaged.	Replace the motor. (*)
Suction is poor. (For Class M and H versions) The suction LED "♣ "flashes and the acoustic warning is sounded; Air speed in the tube ≤ 20 m/s.	Suction tube diameter switch not combined with the flexible tube used.	Turn the switch to the correct diameter of the flexible tube used.
	Waste container full.	Empty container.
	Fleece bag full.	Replace the dust bag.
	Filter elements clogged.	Clean the filter components.
		Clean or replace the cartridge filter.
	Accessories or tubes clogged.	Check and clean the flexible tube and the suction nozzle.
	Damaged vacuum motor.	Replace the motor. (*)
	Suction nozzle squeegee worn or damaged.	Check and replace the squeegee.
(For Class H version) The suction is poor, the filter LED "is flashing and the acoustic warning is sounded.	No cartridge filter.	Install the filter.
	Cartridge filter clogged or damaged.	Clean or replace the filter.
The suction motor stops. (For Class M and H versions) The filter and suction " LEDs are turned on and the acoustic warning is sounding.	Use as dry vacuum cleaner: Suction motor overheated.	Wait a few minutes for the suction motor to cool down.
		Check and clean all the parts that could compromise correct suction.
		Checks the ventilation grilles for suction motor cooling.

PROBLEM	CAUSE	SOLUTION
The suction motor stops. (For Class M and H versions) The filter " and suction and suction" and suction " LEDs flash simultaneously and the acoustic warning is sounded.		Empty container.

^(*) Maintenance by a Ghibli & Wirbel service centre.