

PROBLEM	CAUSE	SOLUTION
The machine does not turn on when the key is turned.	Low battery.	Check that the battery is charged.
	Main fuse blown.	Replace the master 7,5A fuse.
The brush does not rotate.	Brush fuse blown.	Replace the WHITE 25A brush motor fuse.
	Brush rotation enabling switch not pressed	Press the switch.
Aspirator does not work.	Aspirator fuse blown.	Replace the RED 40A fuse for the suction unit's motor.
	Suction unit switch not pressed.	Press the switch.
	Recovery tank full.	Empty, wash and clean the tank and the probes.
The machine does not dry well, leaving traces of water on the floor.	Aspirator off.	Start up the aspirator.
	Aspiration tube blocked.	Check and if necessary clean the aspiration tube that connects the squeegee to the recovery tank.
	Recovery tank full.	Empty the recovery tank.
	Squeegee rubber blades worn.	Replace or turn over the squeegee rubber blades.
No water comes out.	Tank empty.	Fill the tank.
	Solenoid valve enabling switch not pressed.	Press the switch.
	Tap turned off.	Open the tap
	Filter blocked.	Clean the filter.
	Solenoid valve does not work.	Call the technical support service.

PROBLEM	CAUSE	SOLUTION
Insufficient floor cleaning.	Unsuitable brushes or detergent. Brush worn.	Use brushes or detergents which are suitable for the type of floor or dirt to be cleaned. Replace the brush.